

Canon mx310 series printer manual



File Name: Canon mx310 series printer manual.pdf

Size: 2194 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 2 May 2019, 12:12 PM

Rating: 4.6/5 from 704 votes.

Download Now!

Please check the box below to proceed.



I'm not a robot



reCAPTCHA
Privacy - Terms

Book Descriptions:

Canon mx310 series printer manual



This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. Scroll down to see your support options. You can also click one of these links to search our extensive Knowledge Base or visit the Canon Community Forum. The driver may be included in your OS or you may not need a driver. Recommended Drivers File Name Date File Size Optional Drivers File Name Date File Size Recommended Software File Name Date File Size Optional Software File Name Date File Size Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover any accessories, or any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement. Repairs of such Canon brand peripheral equipment shall be governed by the terms of the Separate Warranty. The sole warranty, if any, with respect to such nonCanon brand items is given by the manufacturer or producer thereof. Without limiting the foregoing, dropping the Product, scratches, and abrasions will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the users manual or other documentation for the Product. The name and telephone number of the ASFs near you may be obtained from Canon USAs Web site at www.canontechsupport.com or by calling the Canon USA Customer Care Center at 18008284040, or any time while speaking to a technical support person. A Product covered by this limited warranty will be repaired or exchanged, as determined by Canon USA, and returned without charge by the

ASF. http://cicinstall.com/testingsites/advantage_aviation/assets/media/dsc-pc5508z-installer-manual.xml

- 1.0.



FIGURE 1 EXTERNAL PARTS POWER SUPPLY & LOGIC BOARD

FIGURE 2 ADF & SCANNER

NUM.	PART #	DESCRIPTION	NUM.	PART #	DESCRIPTION
1-1	QM3-2891-000	SIDE COVER L ASSY	2-9	QL2-2340-000	DF FRONT PANEL ASSY
2	QR1-3609-000	CAP. TEL CONNECTOR	10	QC2-5425-000	COVER, DF FRONT DECO
3	QC2-5371-000	REAR COVER	11	QC2-5194-000	SHEET, DOCUMENT PRESSURE
4	QM3-2892-000	SIDE COVER R ASSY	12	QC2-5324-000	DF STOP ARM
5	QM3-2864-000	PAPER SUPPORT UNIT	13	QC2-5428-000	COVER, DF REAR
6	QM3-2865-000	FRONT TRAY UNIT	14	QC2-5366-000	GUIDE, DF CABLE
7	QC1-6024-000	EMBLEM	15	QM3-2861-000	DOCUMENT FEED UNIT
8	QR1-3622-000	AC ADAPTER: 100V-240V 50/60HZ	16	QC2-5472-000	DF TRAY
25	QM3-2996-000	DAMPER UNIT, SCANNER	17	QC2-5465-000	SPRING, DF EJECT BACKUP
26	QC2-4363-000	GEAR, DAMPER RACK	18	QC2-5494-000	ROLLER, DF EJECT BACKUP
33	QC2-5322-000	FRONT COVER	19	QC2-5496-000	SHAFT, DF EJECT BACKUP
34	QL2-2038-000	MIDDLE FRAME ASSY	20	QC2-5427-000	COVER, DF SIDE
35	QM3-2779-000	SCANNER COVER HARNESS ASSY	21	QC2-5430-000	ADF HINGE
36	QM3-2780-000	FRONT TRAY HARNESS ASSY	22	QC2-5429-000	COVER, DF DECO
37	QR1-3686-000	HARNESS, FPC/BRODGE	23	QC2-5428-000	COVER, DF
38	QC2-4765-000	SHEET, LOGIC BOARD	24	QC2-5423-000	BASE, DF
39	QM3-2758-000	LOGIC BOARD ASSY	27	QC2-5402-000	COVER, PANEL
40	QM3-2760-000	SPEAKER HARNESS UNIT	28	QC2-5404-000	LCD WINDOW
41	QC2-5340-000	GUIDE, FPC	29	QC2-5514-000	STAY, SCANNER
42	QM3-2761-000	AS/FE SENSORS UNIT	30	QC2-5509-000	SPRING, SCANNER STAY
			31	QM3-2870-000	OPERATION PANEL UNIT
			32	QM3-2867-000	SCANNER UNIT

If the problem cannot be corrected over the telephone, and you elect the InstantExchange option, a reference number will be issued to you. You will be asked for the Product serial number and other information pertaining to your Product and for a ship to location for the replacement Product must include street address. After receipt of the replacement Product with instructions and a prepaid waybill, follow the enclosed instructions on how to ship your product to the Canon USA repair facility. Your Product must be returned in the shipping carton in which the replacement Product was packed and include the reference number, A COPY OF YOUR DATED PROOF OF PURCHASE BILL OF SALE, and a complete explanation of the problem. Canon USA does not guarantee same day shipment in the event of the occurrence of factors beyond its reasonable control. The replacement Product you receive may be a refurbished or reconditioned unit and will be covered for the balance of the period remaining on your original limited warranty. Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store Perfect for creating any type of Greeting Card with an extensive variety of downloadable templates from the Canon Inc. Glossy finish for impressive photos. Genuine Canon Paper for quality images. An economical choice for great prints. An economical choice for great prints. Optimize output resolution to create nearphotographic images. This paper is great when you want highquality color output to produce winning reports and eye-catching graphics. Use with genuine Canon Photo Inks for true photoquality output. Package includes 100 sheets. Great for portrait and wedding and fine art photography prints. Package includes 50 sheets. Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! <http://gomezcana.com/userfiles/dsc-pc5508-manual.xml>



Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 120 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 50 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 20 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 20 sheets. Learn about the technology behind the paper. Learn about the technology behind the paper. Learn about the technology behind the paper. Learn about the technology behind the paper. Learn about the technology behind the paper. Package includes 20 sheets. Package includes 15 sheets. High quality photos print right onto a sticker sheet, so just peel and stick. 16 stickers per sheet. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. For further information about extending your Canon service and support, call 18003852155, or visit our Web site at www.canonesp.com.

CarePAK must be purchased during your product's warranty period. All statements, technical information and recommendations in this manual and in any guides or related documents are believed reliable, but. Lights or flashes green to indicate the power status. Before turning on the machine, make sure the Document Cover is closed. 2 COPY button Switches the machine to copy mode. Also changes the mode when entering characters. 16 OK button Finalizes your selection for the menu or setting item. Dismisses the error message and resumes the machine's normal operation after resolving a printing error or removing jammed paper. You can specify the various print settings in copy mode, or page size and media type settings in fax mode by using these setting items. Turning on the Machine Before turning on the machine, confirm the following. The FINE Cartridges are installed properly. If you are using the machine connected to a computer, confirm also the following. The machine is connected to your computer or a compatible device. Original Document Requirements The original documents you load on the Platen Glass or the ADF for copying, scanning, or faxing must meet these requirements Document type Paper documents. Place the original in landscape orientation and align the upper corner of it with the alignment mark as shown in the figure on the right. Remove any documents from the Platen Glass. Open the Document Tray. Load the document in the ADF. Load the document with the side you want to copy, scan, or fax

facing up in the ADF. Using Specialty Media Canon recommends that you use Canon genuine media to ensure optimal print quality. Photo Quality Media Glossy Photo Paper Matte Photo Paper. You may not be able to purchase some Canon genuine papers depending on the country or region of purchase. When Printing on Plain Paper You can use general copy paper or Canon's Super White Paper. When printing on both sides, we recommend Canon's Super White Paper DoubleSided.



<https://skazkina.com/ru/bosch-integra-ascenta-dishwasher-manual>

Put your finger in the rounded indent of the Paper Support and pull it out until it stops. 2 Open the Paper Output Tray. Put your finger in the rounded indent beside the Paper Output Tray and open it gently. Load with the address side facing UP and the rear flaps DOWN on the left. Up to 10 envelopes can be loaded at once. 2 Pinch the Paper Guide and slide it against the left side of the envelope. Load the paper. 1 Load the paper against the right side of the Rear Tray with the print side facing UP. 2 Pinch the Paper Guide and slide it against the left side of the paper stack. Turn on the machine. See "Turning the Machine On and Off" on page 6. Press the COPY button. Load paper. See "Loading Printing Paper" on page 11. Load the original on the Platen Glass or the ADF. See "Loading Original Documents". MEDIA TYPE Select the media type of the loaded paper. Select Print on the application software's File menu. Make sure that Canon XXX Printer where "XXX" is your machine's name is selected in Select Printer, and click Preferences or Properties. For details, refer to the instruction manual of your application. The steps described in this section are for printing in Mac Turn on the machine and load the paper in the machine. See "Turning the Machine On and Off". If you are scanning printed text, you can use the OCR Optical Character Recognition software to convert it to text data. Scanning Methods You can select from the various scanning methods. Note Depending on the model or brand of your device, you may have to select a print mode compliant with PictBridge before connecting the device. You may also have to turn on the device or select Play mode manually after connecting the device to the machine. Note In the following description, names of setting items are given according to those used in Canon brand PictBridge compliant devices. Setting item names may be different depending on the brand or model of your device.

<https://cluster-consulting.com/images/buffalo-user-manual.pdf>



When you select On, the shooting information is used to print the optimized image. If you are using a Canonbrand PictBridge compliant device, the following additional options may be available, depending on the model. Set the print settings to Default on the PictBridge compliant device when you want to print according to the settings on the machine. Displaying the PictBridge Settings Screen and Specifying the Settings Turn on the machine. Connect the machine correctly. The machine may not operate properly. Connecting a Telephone or Answering Machine via a Computer A Computer B Telephone or Answering machine Users in the UK If the connector of the external device cannot be connected to the jack on the machine, you will need to purchase a B.T. These are examples and are not guaranteed to suit every connecting conditions. For details, refer to the instruction manual supplied with the network device control devices such as an xDSL modem, terminal adapter, or dialup router you are connecting to this machine. ROTARY PULSE Suitable for pulse dialing. TOUCH TONE Suitable for tone dialing. Note You cannot use ROTARY PULSE depending on the country or region of purchase. Such sender information is called Transmit Terminal Identification, or TTI. You can register your TTI in this machine, so that the recipient of your fax will know who sent it, and when it was sent. As long as the date and time is set accurately on your computer, you do not need to set it on the machine. UNIT NAME Press the Numeric buttons to enter your name max. 24 characters, including spaces, then press the OK button. Note For details on how to enter or delete characters, see "Guidelines for Entering Numbers, Letters, and Symbols". To dial the number, press the Coded Dial button, enter the twodigit code assigned to that number. Changing or Deleting a Registered Information To Change a Registered Number or Name Follow the procedures from step 1 to 3 under "Registering Coded Speed Dialing" on page 39.

<http://cmpgrupo.com/images/buffalo-wbr-g54-manual.pdf>



Press the Numeric buttons to enter the new number max. YES Prints the list with the destination name DESTINATION ID in alphabetical order. NO Prints the list with the registered entries in numerical order. Faxing. Step 1 Load the original to send on the Platen Glass or the ADF. See "Loading Original Documents" on page 8. Step 2 Adjust the fax quality and scan contrast. See "Adjusting the Scan Contrast or the Image Quality Fax Resolution". The higher you set the image quality setting, the better the output quality will be at the other end, but the longer it will take for the transmission. SCAN NEXT TRANSMIT If you have only one page of document to scan, go to step 6. 4 Press the same button as you pressed in step 2. If you hear a highpitched signal instead of the recipient's voice, go to step 7. Ask the recipient to set recipient's fax machine to receive faxes. Automatic redialing is enabled by default. Automatic Redialing When using memory sending to send a document and the recipient's line is busy, the machine will redial the number after a specified interval. See "Selecting the Receive Mode" on page 47. Step 2 Load A4, Letter, or Legalsized paper. See "Loading Paper" on page 14. Step 3 Confirm the paper settings and adjust them as needed. Note You will not be able to answer the call. If You Are Using a Single Telephone Line for Faxes and Voice Calls and Use Voice Calls More Frequently Select TEL PRIORITY MODE. The machine can be set to receive faxes automatically after the telephone rings for a specified length of time. Pick up the handset to answer the call. C Fax The fax is received automatically when the machine detects the registered fax ring pattern. To use this feature, you need to subscribe to a compatible service provided by your telephone company. Contact your telephone company for details. Setting the Receive Mode Press the FAX button, then press the Menu button. Press the OK button.

Important If paper of size other than A4, Letter or Legal is loaded, the received faxes will not be printed and "RECEIVED IN MEMORY". Send or print necessary documents before disconnecting the power cord. Note When confirming, printing, or deleting a document stored in memory, you specify it by its transaction number. Refer to the pages indicated for more details. Report Or List Activity report Coded speed dial list User's data list Memory list TX Transmission report Confirms whether a transmission was completed successfully. See "Registering Sender Information" on page 34. Printing the User's Data List Press the FAX button, then press the Menu button. Print the nozzle check pattern to confirm the condition of the nozzles and then perform Print Head Cleaning. Make sure that the machine is turned on, then load a sheet of A4 or Lettersized plain paper in the Rear Tray. Open the Paper Output Tray, then set the Paper Thickness Lever. Note The nozzle check pattern will not be printed correctly if there is not enough ink. Replace the FINE Cartridge if the remaining amount of ink is insufficient. See "Replacing a FINE Cartridge". Cleaning unclogs the nozzles and restores the print head condition. Note that cleaning the Print Head causes used ink to be absorbed in the ink absorber. Cleaning the Print Head consumes ink, so perform Print Head Cleaning only when necessary. Note that cleaning the Print Head causes used ink to be absorbed in the ink absorber. Print Head Deep Cleaning consumes more ink than standard Print Head Cleaning, so perform this procedure only when necessary. Make sure that the machine is turned on, then load two sheets of A4 or Lettersized plain paper in the Rear Tray. Open the Paper Output Tray, then set the Paper Thickness Lever. When ink runs out or other errors occur, an error message is displayed on the LCD to inform you of the error.

<https://intelean.com/wp-content/plugins/formcraft/file-upload/server/content/files/16271ba4b54f4c---braun-6022-user-manual.pdf>

Note You can also display the printer status monitor by clicking Canon XXX Printer where "XXX" is your machine's name which appears on the taskbar during printing. Open the Canon IJ Printer Utility. However the print quality may be reduced compared to when printing with both cartridges. Canon recommends to use new FINE cartridges in order to obtain optimum qualities. Do not touch the metallic parts inside the machine. Important If the Scanning Unit Printer Cover is left open for

more than 10 minutes, the FINE Cartridge Holder moves to the right. The Black FINE Cartridge should be installed into the left slot and the Color FINE Cartridge should be into the right slot 2 Push up the FINE Cartridge until it clicks into place. Caution Do not use tissue paper, paper towels, or similar materials for cleaning. Paper tissue powders or fine threads may remain inside the machine and cause problems such as a blocked Print Head and poor printing results. Open the Document Tray. Open the Feeder Cover. With a soft, clean, lintfree and dry cloth, wipe off any paper dust from the inside of the Feeder Cover A. Rotate the roller A manually as you clean it. Do not touch the roller with your fingers; rotate it with the cotton swab. If this does not solve the problem, contact your Canon service representative. Cleaning the Inside of the Machine Bottom Plate Cleaning This section describes how to clean the inside of the machine. Set the Paper Thickness Lever to the left. For details on the Paper Thickness Lever, refer to "Inside" in "Main Components" of the User's Guide onscreen manual. Note This section mainly describes the methods of machine operation for troubleshooting. To handle problems using your computer, refer to "Troubleshooting" in the User's Guide onscreen manual. For details on how to view the onscreen manuals, see "Reading the Onscreen Manuals".

<http://www.AUTODESGUACECOIN.COM/ckfinder/userfiles/files/bosch-shx68m09uc-manual.pdf>

Please be advised that Canon shall not be liable for any malfunction or trouble caused by continuation of printing under the ink out condition. Ink has run out. After a while, plug the power cord of the machine back in, and then turn on the machine. If the same error occurs, contact your Canon service representative. Try dialing again after waiting for a moment. An Unintended Language Is Displayed on the LCD Cause The language you want to be displayed is not selected. Action If the Power lamp is off The machine is not powered on. If other disks are displayed, there is a problem with the Setup CD ROM. Contact your Canon service representative. Do the page size and media type settings match the size and type of the loaded paper. When these settings are incorrect, you cannot obtain a proper print result. If you are printing a photograph or an illustration, incorrect paper type setting may reduce the quality of printout color. Print Head nozzles are clogged. The media is loaded with the wrong side facing upwards. Print Head is misaligned. White Streaks Cause Print Head nozzles are clogged. See "Media Types You Cannot Use" on page 13. Action Clean the paper feed roller. Cleaning the paper feed roller will wear the roller, so perform this procedure only when necessary. Inappropriate Paper Thickness Lever setting. Printing graphics with the intensity setting set too high. Printing beyond the recommended printing area. Action For Plain Paper Turn the paper over and reload it to print on the other side. Leaving the paper loaded in the Rear Tray for a long time may cause the paper to curl. Print Head is misaligned. The Print Result Not Satisfactory When Copying Cause The original document is not loaded correctly. The original document is loaded with the wrong side facing upwards. The original document is a printout from this machine. Paper Does Not Feed Properly Cause Printing on inappropriate type of paper. Paper feed roller is dirty. Paper not loaded properly.

Too much paper loaded. Foreign object in the Rear Tray. Envelopes not prepared nor loaded properly. Do not load credit cardsized paper in landscape orientation. Note The document may not feed properly depending on the media type, or your environment, such as when the temperature and humidity are either too high or too low. If you cannot remove the document or the document tears inside the machine, or if the document jam error continues after removing the document, contact your Canon service representative. Troubleshooting. Make sure that a port named USBnnn where "n" is a number with Canon XXX Printer appearing in the Printer column is selected for Print to the following ports. Machine is not connected properly. For errors on nonCanon PictBridge compliant devices, check the error message on the LCD and take the appropriate action to clear the error. For details, see "An Error Message Is Displayed on the LCD". If the same error occurs, contact your Canon service representative. Action Follow the procedure described in your setup sheet to reinstall

the MP Drivers. Machine Does Not Switch Automatically between Voice and Fax Calls Cause The receive mode displayed on the bottom left of the LCD is FAXONLY. The sender's fax machine is not operating normally. Problems Sending Faxes Cannot Send a Fax Cause The machine is not powered on. The image quality setting or the scan contrast setting is not suitable for the document. This sheet includes instructions for setting up your machine and getting it ready for use. Quick Start Guide This guide Read this guide when starting to use the machine. After following instructions in your setup sheet, we recommend you read this guide to familiarize yourself with the basic operation of some of the main functions that can be performed on your machine. Default Off No printing, Date, File No., Both, Off Trimming Default Off No trimming, On follow camera's setting, Off.

Additional System Requirements for OnScreen Manuals Browser Windows HTML Help Viewer Note Microsoft Internet Explorer 5.0 or later must be. Do not attempt to use the machine in any way not described in this manual. Warning This product emits low level magnetic flux. If you use a cardiac pacemaker and feel abnormalities, please move away from this product and consult your doctor. Never use flammable solvents such as alcohol, benzene or thinners. If flammable solvents come in contact with electrical components inside the machine, it could cause a fire or electric shock. Always unplug the machine from the power outlet before cleaning the machine. Do not place any object on the machine. Do not place metal objects paper clips, staples, etc. or containers of flammable solvents alcohol, thinners, etc. on top of the machine. The list provided is nonexhaustive. When in doubt, check with a legal representative in your jurisdiction. Users should contact their local authorized Canon Facsimile Service Dealer for the servicing of equipment. Safety Precautions. The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services. Copyright This manual is copyrighted by Canon U.S.A., Inc. with all rights reserved. Lights when there are documents stored in the machine's memory. 4 Dismisses the error message and resumes the machine's normal operation after resolving a printing error or removing jammed paper.

You can specify the various print settings in copy mode, or page size and media type settings in fax mode by using these setting items. Press the FAX Quality button to display the fax quality setting items in fax mode. You can speTurning on the Machine Before turning on the machine, confirm the following. The machine is connected to your computer or a compatible device. The MP Drivers are installed. Do not press or put weight on the original with presLoad the document with the side you want to copy, scan, or fax facing up in the ADF. 4 Adjust the Document Guides to match the document width. Note Ensure that the edge of the document stack is in line with the Paper Size Mark A imprinted on the Document Tray. A 10 Before Using the Machine Using Specialty Media Canon recommends that you use Canon genuine media to ensure optimal print quality. Always load paper in portrait orientation A. Loading paper in landscape orientation B can cause the paper to be jammed. A B Note We recommend using genuPut your finger in the rounded indent of the 2 Paper Support and pull it out until it stops. 4 2 Open the Paper Output Tray. Put your finger in the rounded indent beside the Paper Output Tray and open it gently. 3 Open the Output Tray Extension. 3 Open up and set the Output Tray Extension completely by pressing down the hollow on its front side. 4 Adjust the position of the Paper Thickness Lever. If the envelopes. So then, you just need this one device only in order to have the more efficient performance than before. On the other words, it will never require many spaces in your room, so that you can still have a good and flawless mobility even when you use the printer. Each of them will really enhance the performance of the device to the next level. So you will find that this equipment can always give you the notable printing results that you

really want. PageManager Windows only, ScanSoft OmniPage SE You can download on the links we provided. Select it and press Continue.

When you have already completed the downloading process, it will be saved in the certain folder. Do not worry, the installation will be started automatically. Find a minus sign under it. If find any broken link or some problem about this printer please let us know, we will fix it as soon as possible. You don't have to go to the official Canon site, simple way to download it, just click on the link that we have provided, and don't forget to follow the manual instruction or you can download a user manual for your printer on this link below. Find out more. Okay, thanks. The machine The FINE Cartridge RETURN" is Wait until the following message appears before proceed Next, turn over and install the software. For details, refer to "Cleaning Your Machine" in the Quick Start Guide. To calculate the overall star rating and percentage breakdown by star, we don't use a simple average. Instead, our system considers things like how recent a review is and if the reviewer bought the item on Amazon. It also analyzes reviews to verify trustworthiness. See All Buying Options Add to Wish List Disabling it will result in some disabled or missing features. You can still see all customer reviews for the product. This printer is a gem, and I can adjust it for any size envelope Which I decorate, as well and Im so pleased to have found it since Canon no longer makes it. However, they gave me a full warranty, and have been very good about updating it for use with Windows 10. Grab one if you can!!! Now the bad 1. If you share your fax line with your home line, the unit is almost 100% likely to start sending tones in the middle of an incoming voice call. There is no setting to turn off automatic incoming faxes. 2. Unless you use the photographic setting, each and every page you print is printed in greys no true blacks. And the photographic quality setting eats up the ink unlike any other printer Ive had before.

With no way to fish the thing out I even turned the printer upside down it was a frustrating event. As another user pointed out, its a bit of a delicate flower too much for its own good. A real disappointment since I have had other really great Canon products before. Please try again later.I researched all the current printers and could not find one that would successfully print the greeting cards I love making, as the heavier gauge card stock cannot be used on the new front feeding printers. This printer is a gem, and I can adjust it for any size envelope Which I decorate, as well and Im so pleased to have found it since Canon no longer makes it. Grab one if you can!!!Please try again later. Please try again later. T. Acar 5.0 out of 5 stars I finally justified the purchase of an allinone, and this one does it really well. I read many reviews including quite a few HP models and one Brother. Brother was the first one to go out. Even though the Bother had the network printing capability, the reliability and operating system compatibility turned out to be an issue based on my research. It might have worked, but why take the chance As for HPs. Ive been mostly lucky with my HP printers so far. Keep in mind that getting my hands dirty by transplanting the guts of a notebook AC adapter to replace an HP printers AC adapter is not a hassle, but fun to me. Yes, that happened, and I used an old HP deskjet after that surgery for years without a hiccup. Anyways, no more HPs, as I already have a second one, and it looks like HP allinones have reliability problems. The Canon AIO is just great. Scanner is very good compared to my old Epson which was promptly donated. You can adjust the DPI, and the software that comes with it is get ready for a surprise is quite useful. What a change after suffering useless HP software over the years. I love the ADF, and I use it a lot more than the platen to scan bunch of documents. No problems with any of the features so far.

<http://fscl.ru/content/bosch-integra-ascenta-dishwasher-manual>