

Compaq mp1600 projector manual



File Name: Compaq mp1600 projector manual.pdf

Size: 1212 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 22 May 2019, 23:18 PM

Rating: 4.6/5 from 815 votes.

Download Now!

Please check the box below to proceed.



I'm not a robot



reCAPTCHA
Privacy - Terms

Book Descriptions:

Compaq mp1600 projector manual



No accounts or sign ups necessary! While you are waiting, you will have the opportunity to The time required is typically tied to the size of the manual. The software described in this guide is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of the agreement. Users Guide. Compaq MP1600 Microportable Projector Symbols and Conventions. Before operating the projector, please read the following messages. English. Product Features. The Compaq MP1600 Microportable Projector generates crisp, clear images onto a projection screen by using Digital Light Processing DLP Technology. Setting Up the Projector. Instructions below and on the following pages explain how to set up the projector. Separate setup instructions are from the electrical outlet, grasp the cord by the plug. The Compaq Video Adapter can remain attached to the projector, or it can be removed and stored in the carrying case. Follow these instructions to power on the projector 1. Ensure that the power cord and signal cable are securely connected. If this happens, press the Standby button 3 to power on the lamp. Adjusting the Projector Height This projector has a built-in elevator foot that can raise the projector approximately 1 inch. To adjust the height 1. Turn the foot sideways to balance the projector. To fine-tune the leveling of the projector, hold the elevator button in and adjust the leveling. Remove any obstruction that may prevent proper ventilation to the projector, and wait five to ten minutes to allow the projector to cool down before powering it on again. Minus button Plus button Resync button. Digital Conversion. Adjustment scale. Factory Reset Exit Video OnScreen Menu Adjustments When the Compaq Video Adapter is attached to the projector, an alternate Video OnScreen menu. Menu Location. Adjustment scale. Management. Factory Reset Exit. Serial. 3. Highlight the function to be adjusted and press the Select button 1 again. http://iaido-iaijutsu.ru/userfiles_exc/examples-of-manual-dexterity-activities.xml

- **compaq mp1600 projector manual, compaq mp1600 projector manual, compaq mp1600 projector manual download, compaq mp1600 projector manual pdf, compaq mp1600 projector manual free, compaq mp1600 projector manual 2017.**



To void any changes made, select Cancel instead of Save and Return. The onscreen menu is easy to use; just follow the instructions on the screen. Explaining Functions in the OnScreen Menu
Brightness and Contrast Adjusts Modifies the color temperature balance. Saturation Magnifies the color intensity. Factory Reset Resets the current operating option to its original factory setting. Lamp May Fail Soon, Replacement Suggested Indicates the lamp is approaching failure. The message will remain on the screen for five seconds or until the onscreen menu Select button is pressed. Adjust only those controls that are covered by the operating instructions. If the projector is not operating properly or has been dropped or damaged, contact your Compaq authorized dealer, reseller, or service provider. To clean the lens, use only the clean cloth that was included with the projector and follow these steps. CAUTION Do not spray any type in the open air or in a lab coat pocket. Contact your local Compaq authorized dealer, seller, or reseller to purchase a spare lamp or have the lamp changed. Never open the lamp cover while the projector is operating or when the lamp is hot. Troubleshooting. Continued. Only the Compaq startup screen displays. Contact your local Compaq authorized dealer, seller, or reseller to purchase a replacement lamp module. Compliance with these directives implies conformity to the following European norms Compaq MP1600 Microportable Projector. Projection Panel Lamp Type Image Size Avg. This projector automatically recognizes the preset display resolutions listed in the following table. Display Resolutions. Identifying the Buttons and Connectors. The Compaq Video Adapter converts video signals for compatibility with the Compaq MP1600 Microportable Projector. The Compaq Video Adapter is not included with the Compaq MP1600 Microportable Projector. It is sold separately. Both cables are included with the Compaq Video Adapter. <http://changdahk.com/upload/examples-of-manual-guidance-in-sport.xml>



Go to Using this Guide this section Previous Page Next Page. Click a subject in the bookmarks on the left side of the screen to jump to that subject. Click any. You may find documents other than just The Power Cord Is A Replacement And Ive Tried Two Diffe Is the cord specific to the unit I. My stepson bought. All In One Its in good condition but it needs another hard drive. Be sure to check that it is the user manual to exactly the device that you are looking for. In our database Compaq MP1600 it belongs to the category Projector. A user manual Compaq MP1600 is taken from the manufacturer, a Compaq company it is an official document, so if you have any doubts as to its contents, please contact the manufacturer of the device Compaq MP1600 directly. You can view the user manual Compaq MP1600 directly online or save and store it on your computer. If you have any questions, you can ask them in the form below. Other users viewing this website will have the opportunity to help you solve your problem with Compaq MP1600. Remember that you can also share the solution. If you solved the problem yourself, please write the solution to the problem with Compaq MP1600 you will surely help many users by doing so. Ask a question our users can help you. No part of this guide may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation. Page 3 CONTENTS preface USING THIS GUIDE Symbols and Conventions.v Warning Messages.vi book 1 ENGLISH Product Features.11 Introduction.12 Setting Up the Projector. Page 4 Care and Maintenance. 126 Protecting the Projector. 126 Cleaning the Lens. 127 Replacing the Projector Lamp Module. 128 appendix A TROUBLESHOOTING appendix B AGENCY REGULATORY NOTICES Federal Communications Commission Notice. B1 Modifications. Page 5 preface Using This Guide The Users Guide includes general information about your projector, troubleshooting and diagnostics, and technical specifications.

Symbols and Conventions The following words and symbols mark special messages throughout this guide. **WARNING** Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life. Page 6 **Warning Messages** Before operating the projector, please read the following messages. ! **WARNING** To reduce the risk of harm to your eyes, do not look directly into the bright light of the projection lens. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. To reduce the risk of electric shock, do not disassemble the projector other than to replace the lamp module. Page 7 book 1 English Product Features The Compaq MP1600 Microportable Projector generates crisp, clear images onto a projection screen by using Digital Light Processing DLP Technology. The features include the following 120watt 1024 highefficiency, longlife lamp 768 native XGA resolution Maximum Digitally Weighs zooms to 32 4.2 pounds weight may vary slightly Standard All resolution 1280 1024 SXGA VGA analog connection digital DFP connection Convenient 16. Page 8 **Introduction** The Compaq MP1600 Microportable Projector comes with the following items Projector 10foot Two and lens cap power cable signal cables One VGA signal cable for use with computers, portables, and some handheld products One

digital DFP digital flat panel signal cable for use with compatible digital sources Carrying Lens case and separate projector carrying handle cleaning cloth kit Phillips Quick screwdriver Setup card, this User's Guide and other documentation Page 9 If your shipping box does not contain all of the listed items, please contact your Compaq authorized dealer, reseller, or service provider. Setting Up the Projector Instructions below and on the following pages explain how to set up the projector. Page 10 Connecting the Projector to a Portable Computer 1.



<https://skazkina.com/ru/boss-bcb-60-manual-pdf>

Connect one end of the projector signal cable to the projector and the other end to the VGA connector 1B or the DFP connector 1A on the portable computer and tighten the screws. Use the VGA cable OR the DFP cable; do not connect both cables. Do not force the cable onto the connector or you may damage the signal cable or the projector. 2. Page 11 Connecting the Projector to a Desktop Computer 1. Connect one end of the projector signal cable 1B to the projector and the other end to the VGA connector on the desktop computer and tighten the screws. Connect either the VGA cable OR the DFP cable; do not connect both cables. Page 12 Connecting the Projector to a Compaq PC Companion To connect the projector to a Compaq PC Companion, the PC Companion must have a male connector adapter and a VGAout PC Card with a 15pin connector. VGAout PC Card with the 15pin connector is not included with the Compaq PC Companion. It is sold separately. For information on purchasing this card, call your Compaq authorized dealer, seller, or reseller. Page 13 Connecting the Projector to Other Video Sources To connect the projector to a camcorder, DVD player, or VCR, the Compaq Video Adapter must be connected to the projector. The Compaq Video Adapter has been specifically designed to fit the Compaq MP1600 Microportable Projector. This adapter converts the signals from the camcorder for compatibility with the projector. Compaq Video Adapter is not included with the Compaq. The MP1600 Microportable Projector. It is sold separately. Page 14 When the adapter is activated, one of the LEDs 4 on the video adapter will turn green. Connecting a Camcorder, VCR, or DVD Player to the Compaq Video Adapter 1. Use an RCA cable to connect a VCR to the video connector 1 on the video adapter. Use an Svideo cable to connect a camcorder or DVD player to the Svideo connector 2 on the video adapter. 2.

<http://www.compustiteinc.com/images/cargo-securing-manual-container.pdf>

Page 15 sure to place the rubber boot cover over the DFP Be digital connector on the projector when it is not in use to prevent electrostatic discharges from damaging the connector. Powering On the Projector Follow these instructions to power on the projector 1. Ensure that the power cord and signal cable are securely connected. Make sure the projector is perpendicular to the screen. 2. Remove the lens cap 1 by pulling it straight out. 3. Page 16 4. Power on your source computer, PC Companion, or VCR, etc. and launch the software application being used to display images on the projection screen. If applicable, press the Function key on the computer designated for external display. If there is a long delay between the time the startup screen displays and the time the presentation software is launched, the lamp may shut off and the projector will automatically go into standby mode. Page 17 Adjusting the Projected Image There are two ways to adjust the projected image Adjusting the projector height Adjusting the projector focus Adjusting the Projector Height This projector has a builtin elevator foot that can raise the projector approximately 1inch. To adjust the height 1. Turn the foot sideways to balance the projector. Page 19 Adjusting the Projector Focus To focus the projected image, rotate the focus ring 1 until the image is clear. The projector will focus at distances from 3.3 feet to 35.64 feet 1 meter to 10.8 meters. If vertical bars appear on the display after adjusting the focus, press the Resync button 2 to automatically synchronize and track the display. Ifdisplay may appear to be dimmer than usual. Page 21 Using the Compaq MP1600 Presentation Utility The Compaq MP1600 Presentation utility included on the CDRom is for use with portable computers only. The purpose of the MP1600 Presentation utility is to disable power management features of the portable computer while the Compaq MP1600 Microportable Projector is connected to it.

<http://condit-pack.com/images/cargo-manual.pdf>



The utility also disables the computer's screen savers and autosuspend feature. Page 22 The MP1600 Presentation utility is provided on the CDROM in the following languages English, Dutch, French, German, Italian, and Spanish. When the installation is executed, the appropriate language is installed on the computer based on the computer's operating system language. If the computer's operating system language is not included as one of the six languages above, then, by default, the English version will install on the computer. Page 23 Powering Off the Projector 1. Press the Standby button to turn off the projector lamp. The message "Going to Standby" displays and the LED on the Standby button blinks amber. IMPORTANT Allow the projector to cool down for about five to ten minutes before turning it off. 2. Turn off the Main power switch on the back of the projector. 3. Disconnect the power cord from the electrical outlet and the projector. Page 24 Operating the Projector Symbol Control Function 1 Standby button and LED Powers the projector lamp on and off. The Standby LED changes color modes to indicate the following operating modes 1. Green glow indicates power is on. 2. Amber glow indicates warmup or suspend modes. 3. Flashing amber indicates the projector is going into standby mode and cannot be restarted until the LED glows amber steadily. 4. Page 25 IMPORTANT To use standby mode, press the Standby button and, after a six to tensescond delay, the unit enters standby mode and the projector lamp turns off. A "Going to Standby" message appears on the screen for the duration of the six to tensescond delay. When the message disappears from the screen, there is a 45second delay before the lamp can be turned back on. Wait 45 seconds to allow the lamp to cool before pressing the Standby button again.

Page 26 OnScreen Menu Continued Language Deutsche English Espanol Francais Italiano Nederlands Save and Return Menu Location UpDown LeftRight Save and Return Cancel Management Power Saver Lamp Hours Reset Lamp Hours Flip Image Factory Reset Exit Serial Number Master Reset Save and Return Cancel Confirm Reset Adjustment scale OnOff Display hours 5 digits Confirmation Horizontal Vertical Both Save and Return Cancel Display Serial Number Confirmation Video OnScreen Menu Adjustments When the Compaq Video Page 27 Video OnScreen Menu Continued Tint Sharpness Language Menu Location Management Factory Reset Exit Adjustment scale Adjustment scale Deutsche English Espanol Francais Italiano Nederlands Save and Return UpDown LeftRight Save and Return Cancel Power Saver Lamp Hours Reset Lamp Hours Flip Image Serial Number Master Reset Save and Return Cancel Confirm Reset Adjustment scale OnOff Display hours 5 digits Confirmation Horizontal Vertical Both Save and Return Cancel Display Serial Number Confirmatio Page 28 bar on the bottom of the onscreen menu shows the current. The operating resolution. For example, to select the Position function, press the Minus button 2 until Position is highlighted, then press the Select button 1 to display the level 2 menu for Position. If the display is a second or thirdlevel menu, select Save and Return or Cancel, then select Exit from the Main menu. The onscreen menu is easy to use; just follow the instructions on the screen.To restore

the factory settings, select Factory Reset in the onscreen menu, or press the Resync button. Page 32 Care and Maintenance This section explains how to care for and maintain your Compaq projector during normal everyday use. Page 33 Cleaning the Lens To minimize the risk of damaging the coating or scratching the lens surface, this cleaning procedure has been developed. The first recommendation is to remove any dust particles from the lens by blowing them off with clean, dry, deionized air.

<http://www.belladermeestetica.com.br/wp-content/plugins/formcraft/file-upload/server/content/files/16283f7efca0df--Buderus-logano-g115-user-manual.pdf>

However, this may not be a convenient method, and an alternate method is described below using the cloth included with the projector. Page 34 Replacing the Projector Lamp Module When the projector lamp reaches its end of life, it may pop when it burns out. The lamp will need to be replaced before the projector can be used again. ! WARNING When the lamp reaches its end of life, it may pop or rupture. To reduce the risk of personal injury, be careful when removing the lamp cover as broken glass may be present. Never open the lamp cover while the projector is operating or when the lamp is hot. Page 35 To replace the projector lamp module, follow these steps 1. Turn off the power to the projector by pressing the Standby button 1. 2. Allow the projector to cool down for at least 30 minutes. ! WARNING The lamp assembly operates at a very high temperature. To reduce the risk of personal injury, allow the projector to cool down for at least 30 minutes before opening the lamp cover. Never open the lamp cover while the projector is operating or when the lamp is hot. 3. Turn off the main power switch 2. 4. Page 36 5. Use the provided Phillips screwdriver to remove the screw 4 from the lamp cover. 6. Remove the cover 5. 7. On the left side of the lamp module, push the electrical connector 6 up to disengage it from the projector base. 8. Remove the three screws 7 from the lamp module. 9. Pull out the lamp module 8. WARNING To reduce the risk of personal injury, do not. The glass may shatter and cause an injury if it is dropped. Page 37 appendix A Troubleshooting Image does not appear on the projection screen 1. Make sure the projector is powered on. 2. Ensure the lens cap has been removed. 3. Press the Standby button again. 4. Ensure that the power cable is securely connected. 5. Ensure the pins on the connectors are not crooked or broken. 6. Turn off or disable the portable or desktop computer screen saver function. 7. Ensure the projection lamp has been securely installed. 8.

www.drussoarts.com/userfiles/files/canon-selphy-es1-service-manual.pdf

Page 38 Continued Portable computer or PC Companion screen is not displaying the presentation Portable computer Most portable computers have a monitor loopthrough or simultaneous viewing function. Press the Fn and the F4 function keys on the portable computer to switch the image from the portable screen to the projection screen or to toggle through the following three options 1. LCD Output displays only on the portable screen. 2. CRT Output displays only on the projection screen. 3. Page 39 Continued Image is out of focus 1. Adjust the Focus Ring on the projection lens. 2. Make sure the projection screen is within the required distance 3.3 35 feet from the projector. 3. Check the projection lens to see if it needs cleaning. Follow the "Cleaning the Lens" procedures on page 127 to clean the lens. Projected colors do not match computer or camcorder color 1. Adjust the Brightness, Contrast, or Color functions in the onscreen menu. 2. Page 40 Continued Lamp shuts off 1. If all five LEDs flash amber, the projector has overheated and will automatically shut down. Wait five to ten minutes until the LED buttons stop flashing and the Standby Button turns amber before restarting the projector again. 2. A minor power surge may cause the lamp to shut off. Wait a few minutes, then turn it back on. Lamp burns out or makes a popping sound When the lamp reaches its end of life, it will burn out and may make a loud popping sound. Page 41 appendix B Agency Regulatory Notices Federal Communications Commission Notice This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. Page 42 Declaration of Conformity for Products Marked with the FCC Logo—United States Only This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions 1 this device may not cause harmful interference, and 2 this device must accept any interference received, including interference that may cause undesired operation. Page 45 Preset Display Resolutions Table This projector automatically recognizes the preset display resolutions listed in the following table. Power Cords The projector power supply is provided with Automatic Line Switching ALS. This feature allows the projector to operate on input voltages between 100/120V or 200/240V. Page 47 appendix C Using the Compaq Video Adapter Identifying the Buttons and Connectors The Compaq Video Adapter converts video signals for compatibility with the Compaq MP1600 Microportable Projector. The Compaq Video Adapter is not included with the Compaq MP1600 Microportable Projector. It is sold separately. For information on purchasing this video adapter, call your Compaq authorized dealer, seller, or reseller. Page 48 Attaching the Video Adapter to the MP1600 Microportable Projector To attach the Compaq Video Adapter to the projector 1. Push in the two buttons 1 on the bottom sides of the video adapter. 2. Insert the hooks on top of the video adapter into the upper slots 2 on the projector, then insert the adapter plug into the digital connector 3 on the back of the projector. 3. Release the buttons 1 on the sides of the video adapter to complete the connection. Page 49 Connecting a Video Player. If your video player uses a round, oneprong composite video connector, use the RCA video cable. If your video player uses a round, fourprong Svideo connector, use the Svideo cable. Both cables are included with the Compaq Video Adapter. 1. Plug the RCA video cable into the videoout port on the video player and the video port on the video adapter. Page 50 Welcome to Using this Guide Go to Using this Guide this section Previous Page Next Page Click a subject in the bookmarks on the left side of the screen to jump to that subject.

Click any blue text to jump to information on that topic. Click the Go Back Arrows in the task bar to return to the previous page. In reality, its more like Mighty Mousecompact, but not quite as robust as its larger brethren. But Compaq left out a remote control and audio speakers. Plus, the fan makes as much noise as a space heater. Using the onscreen menu requires pushing buttons on the side of the projector. Besides, the housing gets hot to the touch after a couple of hours of use. That is about standard for lowend portables. Lamp life is 1,500 hours, also average. Thousands of microscopic mirrors refract light to create the image and colors. The colors are somewhat muted compared with those of LCD projectors. The input sources available with the base unit are standard VGA and digital flatpanel. An additional component can accept Svideo and RCA jack input. Its native resolution is 1,024 by 768 pixels at 16.7 million colors. The price is pretty much in line with other lowend projectors. What is your primary job function. Please indicate your primary branch of government or business activity. Alternatively, choose a bare bulb without housing if you already have experience with replacing bare bulbs and are willing to deal with the more challenging replacement process. If you do not want to compromise on projection quality and reliability, choose an original manufacturer lamp. If you prefer a cheaper option and projection quality and reliability are not your top priority, buy a generic lamp. A suitable compromise is the original bulb inside option. It provides the same projection quality as an original manufacturer lamp, yet for a better price. You can choose from 2 lamp options hybrid or generic. This is a very reliable solution and is cheaper than the original manufacturer option. We recommend it thank to its reliability and affordable price. It is a cheaper solution recommended for inhome use, where projection quality and reliability are not as crucial.

Even though generic lamps are not necessarily of the same quality as original manufacturer lamps, their price is nevertheless very attractive. You can choose from two options of this bare lamp original or generic. This solution is cheaper than a lamp with housing, although it requires a certain amount of manual skills. This option is recommended for customers who already have some experience with bare bulb replacement. Keep in mind that replacing the bulb in the housing requires

manual skills and tools. It is the cheapest option which we recommend for inhome use, where projection quality and reliability are not as crucial. Even though generic bulbs are not necessarily of the same quality as original manufacturer bulbs, their price nevertheless is very attractive. Which one should I choose We will help you find the right lamp Please provide us with your contact details below. We will immediately find out for you exactly when the product should be available, so you can place your order accordingly. Please use the box above to search for any other information. Patent and Trademark Office. All rights reserved. S. Users Guide Second Edition November 1999 Part Number 383706002 The information in accordance with the terms of the agreement. Preface v preface. Using This Guide. The Users Guide includes general information about your projector, troubleshooting and diagnostics, and technical specifications. WARNING Text set off in this manner indicates that Text set off. Before operating the projector, please read the following messages. English. Product Features. The Compaq MP1600 Microportable Projector generates crisp, clear images onto a projection screen. WARNING To reduce the risk of the listed items, please contact your Compaq authorized dealer, reseller, or service provider. The grounding plug is easily accessible at a distance. Separate setup instructions are. Connecting the Projector to a Compaq PC Companion.

To connect the projector to a device, follow the instructions for connecting portable computer. Attaching the Compaq Video Adapter to the projector. For MP1600 Microportable Projector. Push in the two buttons 1 on the back of the video adapter to fit the Compaq MP1600 Microportable Projector. Connecting the Projector to Other Video Sources. To connect the projector to a camcorder, DVD player, or VCR, the Compaq Video Adapter must be connected to the MP1600 Microportable Projector 1. information on. The Compaq Video Adapter can be removed and stored in the carrying case. If there is not in use to the screen. If applicable, press the Function key on the lamp. If there is a long delay between the time the startup screen displays and the time the presentation software is launched, the lamp may shut off and the projector will automatically go into standby mode. There are two ways to balance the projector. Adjusting the Projector Height This projector has a builtin elevator foot that can raise the projector approximately 1 inch. To adjust the height 1. Screen Diagonal Screen Width Screen Height Projection Distance Doubleclick the program icon to install the program. The purpose of the MP1600 Presentation utility is to disable power. Designed for mobile professionals, The projector provides a stability foot to The projector automatically adjusts the The projector uses Will also scale from DVD on Portable PC. Very often issues with Compaq MP1600 begin only after the warranty period ends and you may want to find how to repair it or just do some service work. Even oftener it is hard to remember what does each function in Projector Compaq MP1600 is responsible for and what options to choose for expected result. Fortunately you can find all manuals for Projector on our side using links below. A picture was posted on the inside of the projector would someone kindly suggest where to look for the color wheel and sensor, do I need to open any assembly first to see them.

I promise to post pictures of my results in any case 2ndcat I was hoping to clean the color wheels and check the problem. Would appreciate if someone could post instructions on how to open the projector and how to access and clean the color wheels. Thanks Reddy How can I resync colour wheel. thank Please upload images instead of linking to them to prevent this. Please upload images instead of linking to them to prevent this. Please upload images instead of linking to them to prevent this. Please upload images instead of linking to them to prevent this. Youll also need to remove one screw on the VGA port connector, and also the lamp case cover. Inside, youll need to remove a few screws to remove the protective casing for the light path light path consists of some lens and sensors. There is a little LED sensor on the protective casing that was addressed in this thread earlier. My projector had the same problem of color bleeding and eventually loosing some hues completely as the unit runs for anywhere from 10 minutes to half hour. I took out

the led sensor as a poster suggested but couldnt find that part replacement. Strangely enough, after calling HP compaq and learning that they no longer service MP1600 anymore nor do they sell anything but lamps, with nothing else I am willing to do or can presently do, I put everything back and try it one more time. And it worked. Color stays fine for a week now, no problem whatsoever. Strange little projector. I hope your luck will be as good as mine in the projector healing itself so far at least. Best wishes. Time to slap it around and open it up to see whats up! This guide has helped me get it back up and running. Although now my image is half off the screen and keeps scrolling. Please repost. Thanks Resources saved on this page MySQL 16.67% vBulletin Optimisation provided by.

<http://fscl.ru/content/boss-bcb-60-manual-pdf>